

SPHERIFICATOR MAINTENANCE – Silicon Hose

Disassemble your Spherificator

1. Remove Top and Bottom covers.



2. Remove the two silicon rings from the top.




3. Pinch the middle of the Spherificator along the separation line until an opening is made. Using a flat screwdriver or a butter knife pry open the Spherificator in two - this should be done relatively easily




At this point you will see the interior of the Spherificator, you will also have 4 parts: front and back of the spherificator and the top cone and the bottom nozzle.

4. Using a marker, make a little mark on the side of the hose connecting to the top cone. This way you will reassemble the right hose to the right component.

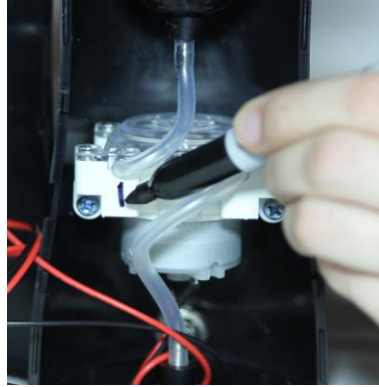


5. Disconnect the top and bottom silicon hose from the stainless tips.

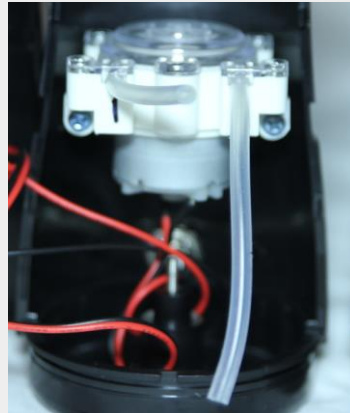

6. You will see in the pump three wheels, two of these wheels are pinching the hose, gently pull the hose from one end until you see the pinch. If you are pulling more than 1" (2cm) and can't see the pinch, it's on the other side. Pull the hose from the other side and locate the pinch.




7. To release the pinch, simply hold both sides on the "pinch" and pull gently. This will release it.

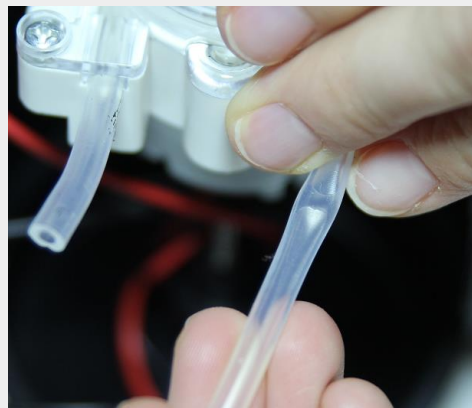

To Reassemble your Spherificator:

8. connect the marked side of the hose to the top cone and the other side to the bottom stainless connector.

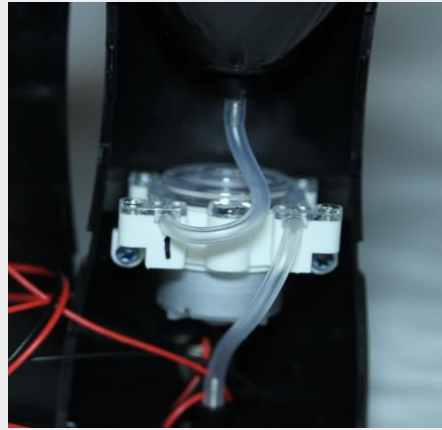

9. Reassemble all four components and clip back together.



10. Slide the silicon ring back on from the top.



11. Put top and bottom covers back on

